

LPD KOKOPELLI™

OPERATION MANUAL

Thank you for purchasing the LPD KOKOPELLI overdrive! The Kokopelli 2024 edition boasts new aesthetics, circuit refinements, and enhanced switching features. Red mode, V1, is the original Kokopelli in all its smooth mid focused sweetness with an added Boost Level control for balancing as a solo boost. Green mode, V2, is all new and includes Bass, Mid and Treble controls to tailor your tone to your guitar and amp. Soft touch true bypass switching keeps your bypass tone pristine while the power on memory will keep you from having to tap dance each time you turn on your pedal board (also super handy for loop switchers or rack drawers).

9-18 volt 30mA operation, 5" x 2.5" x 2.25", 10oz

All LPD pedals are built, one at a time in Mesa AZ USA.

OUTPUT JACK

Insert a 1/4" cable jack going to your amplifier or other pedal effects here.

POWER PORT

Use a 9-18 volt center negative power supply.

INPUT JACK

Insert a 1/4" cable jack from your guitar here.

LEVEL CONTROL

Sets the overall output level of the pedal. This control allows you to match the effect's volume to your dry signal or adjust the overall output level to suit your preference or the requirements of your performance.

VOICE TOGGLE SWITCH

This sets the pre-gain low and low-mid frequencies as well as the low-mids of the first gain stage.

HIGH CONTROL

Controls the amount of high frequencies. A powerful control for setting the amount of cut and energy in the tone. This control is only active in V2 (Green) mode.

V1 / V2 MODE LED INDICATOR

Lights Red when V1 is active and Green when V2 is active.

V1 / V2 FOOT SWITCH

Selects between the original Kokopelli circuit, V1 and the new V2 circuit. The Treble Mid & Bass controls are only active in V2 mode. V1 Boost control is only active in V1 mode. V1 / V2 state is stored at power off.

V1 BOOST CONTROL

Controls the amount of level boost in V1 mode. This control is handy for setting solo boost levels or for hitting the amp harder.

DRIVE CONTROL

Controls the amount of overdrive. Settings above noon add a substantial amount of compression and sustain to the tone.

MID CONTROL

Controls the level of middle frequencies and the body of the tone. This control is only active in V2 (Green) mode.

BASS CONTROL

Controls the level of low frequencies. This control is only active in V2 (Green) mode.

BYPASS LED INDICATOR

Lights when circuit is active.

BYPASS FOOT SWITCH

Soft Touch switch activates or bypasses the Kokopelli. LPD switching features "last state memory" allowing the pedal to power up in the same state it powered off in. Saving some extra tapping.



Crunchy Mid Boost



Fat Singing Lead



Fat Rhythm



Smooth Crunch

